These are some special "recipes" we've cooked up to allow you to use the UTILITY mode of the DMC.micro with your HX Stomp.

To set up these modes, power on your DMC.micro while holding the left button. Release the button when you see the word SETUP scroll on the DMC display.

Tap the left or right buttons to navigate through the setup menus. Hold down the left button to enter a menu, then tap left or right to edit the menu option. Hold the left button again to exit the current menu and return to the main menu.

Hold the right button to save and exit.

The Utility Mode options all start with "U."

Replace "x" with the footswitch you'd like to use - L, R, or A (hold left). Recipes assume your device is set to MIDI channel 1 (A device.) Adjust U xC to match your device assignment if different.

For example, if you want to set the right button to send tap tempo, you'd configure U RT = ONE, U RN = 64, U RL = (not used), U RH = 127, U RC = 1. If you wanted to use the left footswitch for that you'd set the "L" options (U LT, U LN, etc.) instead.

```
Step between footswitch modes:
U xt = ONE
U xN = 71
U \times L = 0 (not used)
U xH = 4 (next footswitch mode)
U xC = A00
Toggle between Stomp and Snapshot modes:
U xt = TOGG
U xN = 71
U xL = 0 (Stomp)
U xH = 3 (snapshot)
U \times C = A00
Trigger FS4:
U xt = ONE
U xN = 52
U xL = 0 (not used)
U xH = 127
U \times C = A00
Trigger FS5:
U xt = ONE
U xN = 53
U xL = 0 (not used)
U xH = 127
U \times C = A00
Toggle EXP2: (simulates expression pedal with two settings)
U xt = TOGG
U xN = 2
U \times L = 0 (heel down)
U xH = 127 (toe down)
U xC = A00
Tap Tempo:
U xt = ONE
U xN = 64
U xL = 0 (not used)
U xH = 127
U \times C = A00
Tuner:
U xt = TOGG
U xN = 68
U xL = 0 (tuner off)
U xH = 127 (tuner on)
U \times C = A00
```

If you just want to navigate the presets on your device you can use the P mode (allows you to rearrange the presets to fire in any order) or the A mode (presets in order only, allows "bypass" if you find that useful.)